The moment keeps going

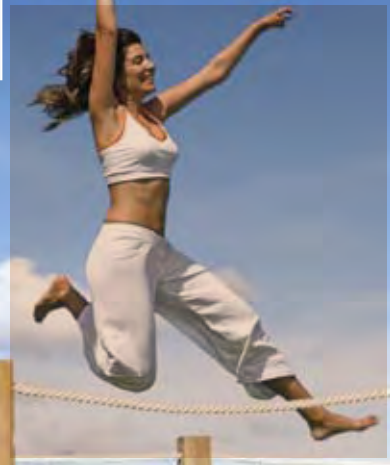

Jackie on holidays
- Great ocean road, Melbourne

8" Optima Series

Bringing memories to life!

Product User Manual (Model No's: DF-F8007b & F8008w)

DigiFrame
digital photo frame

Welcome!

Congratulations on your purchase of a DigiFrame! We understand how special memories of your loved ones and moments that you encounter through your journey are. Now they can be treasured in high quality digital form.

Your DigiFrame is designed to bring your digital photos out of your computer and into your life! It is packed with great features (like movies & functions) to help you get the most out of your special moments.

What's inside

Welcome	1
Safety Information	3
On-board buttons	4
Accessories	6
Remote Control	7
Connection	8
Start-up setting	10
Functions	11
Technical Parameters	19

Safety info

1. Avoid exposing the product to rain, moisture, oil drops etc, to reduce the risk of fire, short circuit or damage to the product.

2. Do not under any circumstances open or tamper with the product as this will void your warranty.

3. Avoid blocking any ventilation holes.

4. Keep the product away from heat source such as radiators, stoves or other equipment that generates heat.

5. Use only the accessories supplied with the product.

6. Avoid leaving product live (plugged in to power point) for long periods of nil use.

7. If you encounter any needs for service or repair for all non-functions, please return it to Digiframe. Application for repair is only accepted when the product is damaged. Non acceptable claims for repair include for example: power supply cable or socket is damaged; fluids flow into the unit; the unit is exposed to rain and moisture or the unit is not properly used or dropped onto the ground.

All repairs must be carried out by DigiFrame or its authorised repairers.

On-board Buttons

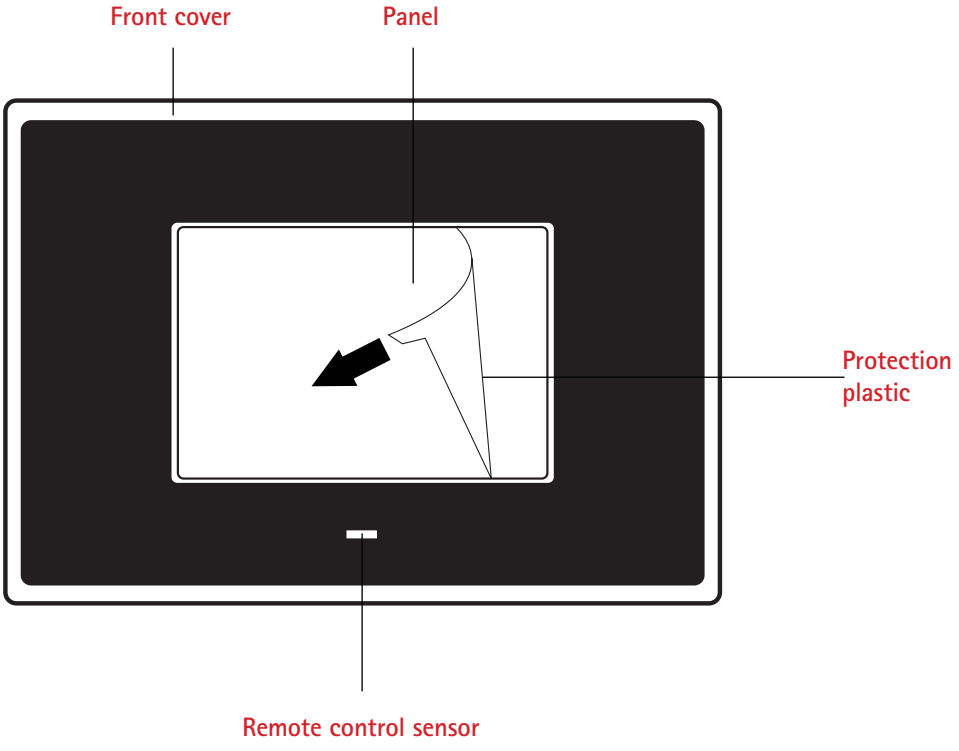

On-board Buttons Cont'

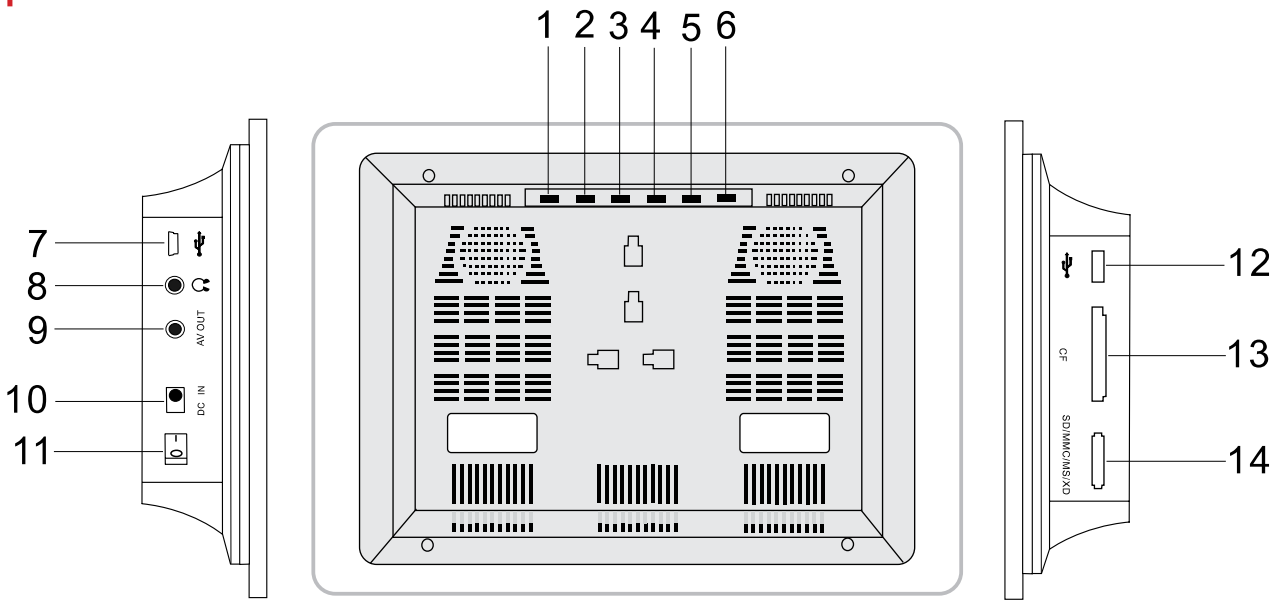

1. Menu button
2. Enter button
3. Right button
4. Left button
5. Up button
6. Down button
7. Mini USB jack
8. Ear phone jack
9. AV out
10. DC power
11. Power switch
12. USB socket
13. CF card socket
14. SD/MMC/MS/XD card sockets

Accessories

Standard Accessories

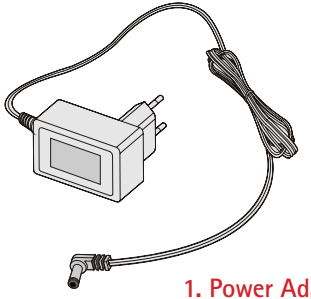

1. Power Adapter

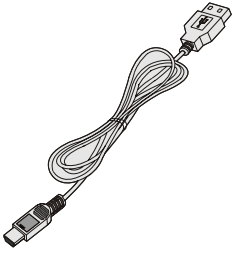

2. USB Cable

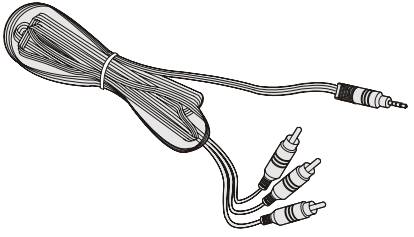

3. AV Cable

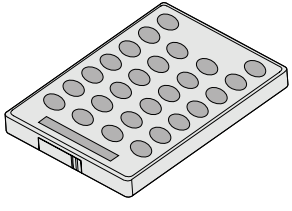

4. Remote Control

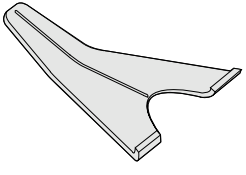

5. Stand

Remote Control

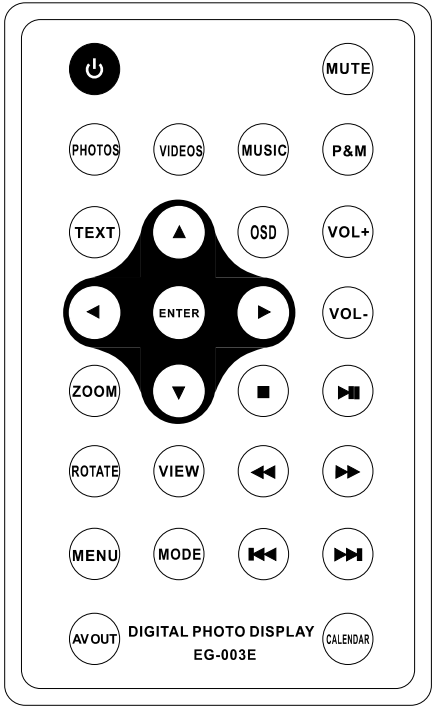

	Power on/off
MUTE	Voice on/off
PHOTOS	Access PHOTOS Mode
VIDEOS	Access VIDEOS Mode
MUSIC	Access MUSIC Mode
P&M	Access P & M Mode
TEXT	Access TEXT Mode
OSD	Access OSD Mode from the main menu; display menu list in other function modes.
	Up Button (move cursor)
	Down Button (move cursor)
	Left Button (move cursor)
	Right Button (move cursor)
ENTER	OK Button (Confirm or Enter)
	Stop Button

	Play/Pause Button (Auto/Manual Slidehow)
	Fast Rewind Button
	Fast Forward Button
	Previous Button
	Next Button
VOL+	Increase volume
VOL-	Decrease volume
ZOOM	Enlarge photo by 5 times
ROTATE	Rotate photo by 90° angle
VIEW	Display nine images in one screen (Thumbnail view)
MENU	Return to main menu
AV OUT	AV OUT Mode
CALENDAR	Access CALENDAR Mode

Connection

Installation of the stand:

The stand can be installed in either vertical or horizontal orientation.
Below is an illustration of installing the stand in landscape (horizontal) orientation.

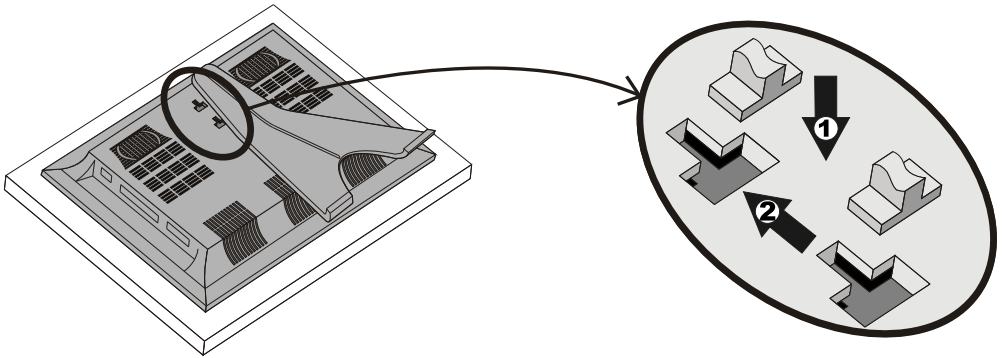

Connect the adapter to the power supply and to the machine as shown to the right.

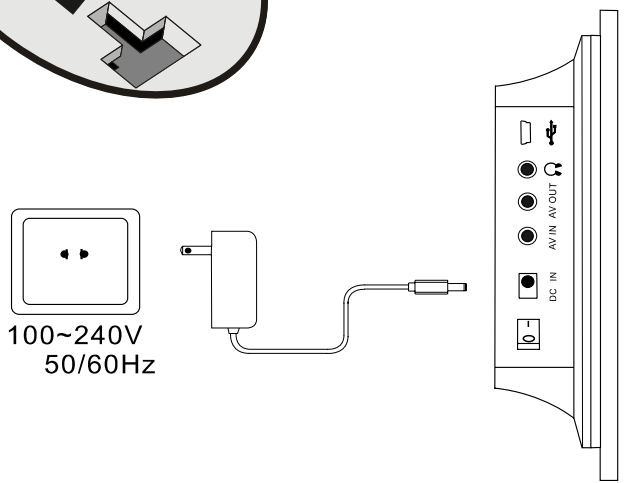

Connection Cont'

Remove plastic from the remote control battery casing to activate.

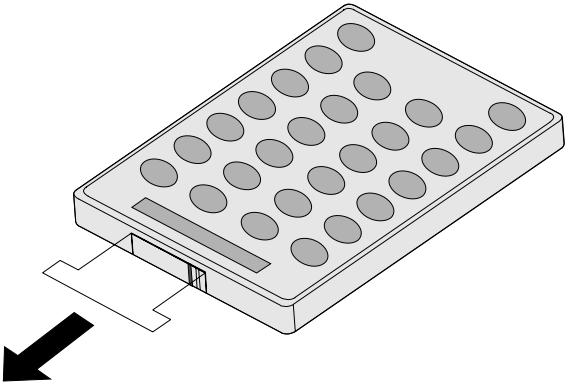

To connect your DigiFrame to a computer: Use the supplied USB Cable.
This function is only for models with an internal memory device.

Note:-

1. Should be turned on when it is connected to a computer.
2. Cannot be operated when connected to a computer.
3. Should be restarted after USB cable is disconnected from a computer.

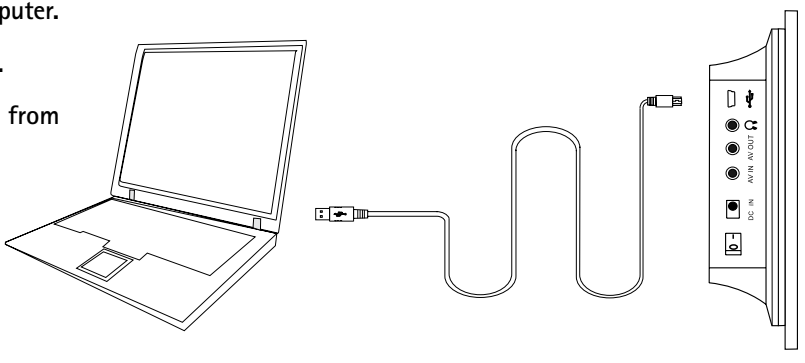

Start-up Setting

Your Digiframe is factory set to "auto-start" photo slideshow. (This can be changed in the menu).

After connecting the Photo Frame to the power supply, switch the power to "ON" and the start-up screen will appear:

To access MAIN MENU, push MENU.

Select "SETTINGS" by using left or right button. Then press the enter button to go to the settings menu.

Main menu screen

Use the up and down buttons to go to the settings menu for languages, pictures, clock, alarm, start-up, video and default settings. Press enter to go to the sub menu and use up, down and enter buttons to make your selections. After finishing settings, press the left button to go back to previous menu or press menu button to go back to main menu screen.

Functions - Photo Mode

PHOTOS Mode

Note:- The PHOTOS button on the remote control will access the slideshow instantly.

To access PHOTOS Mode: On the main menu, move the cursor onto the "PHOTOS" icon (the words below the icon will turn black) by pressing left and right buttons on the remove control or onboard buttons.

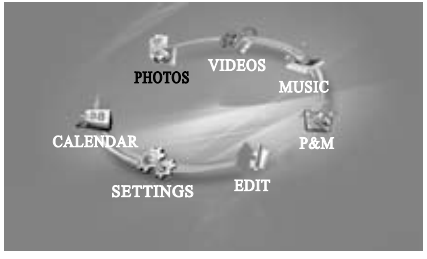

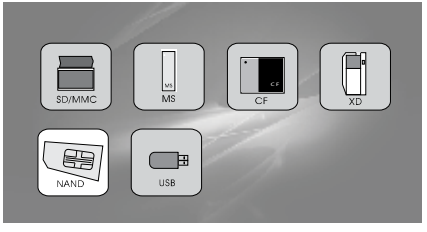

Press Enter button to access or watch the Media Memory device of choice.

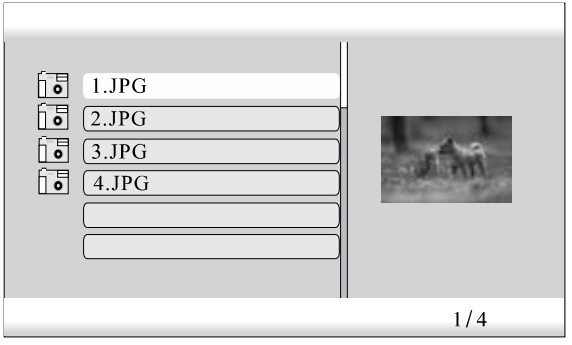

Navigate through preview of photo files to select desired photo – press enter to start slideshow from the selected file. Move the dark cursor onto the target file in photo format by using up and down buttons.

Functions - Video Mode

OSD (on-screen display) description (photo mode)

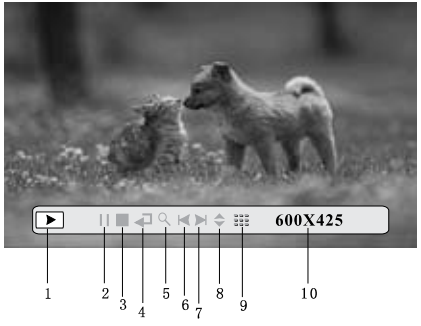

1. Status
2. Pause
3. Stop
4. Rotate
5. Enlarge
6. Previous photo
7. Next photo
8. File information
9. Display 9 images in one screen for thumbnail view.
10. Photo resolution

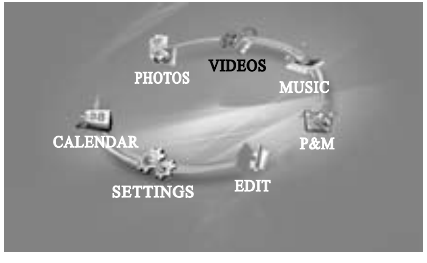

VIDEOS Mode

Note:- The VIDEO button on the remote control will access internal memory videos instantly.

To access VIDEOS Mode:

On the main menu, move the cursor onto the "VIDEOS" icon (words below the icon will turn black) by pressing the left and right button on the remote control or the photo frame.

Press Enter button to access Media Memory Device of choice.

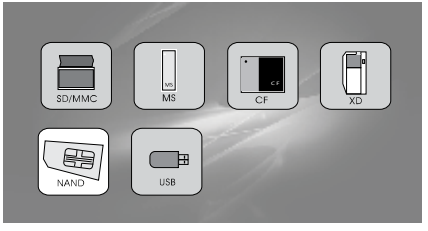

Navigate to desired video file and press enter to play video. (your digiframe will play all available video files).

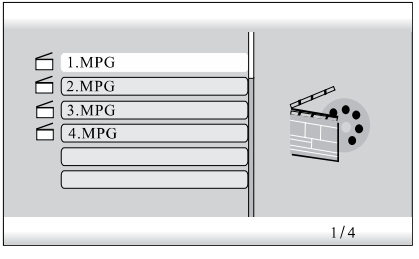

Functions - Video Mode / Music Mode

VIDEOS Mode:

While videos are being played, OSD button will activate "On Screen Display".

1. Status
2. Playing time
3. Pause
4. Stop
5. Previous movies
6. Fast forward
7. Fast forward
8. Next movie
9. File information
10. Enlarge
11. Dual file view
    1. File information
    2. Play mode

MUSIC Mode:

Note:- The MUSIC button on the remote control will access your music files instantly.

On the main menu, move the cursor onto the "MUSIC" icon (words below icon will turn black) by pressing left and right buttons on the remote control or the onboard buttons.

Press Enter button to access Media Memory Device of choice.

Select your Media Memory Device of choice.

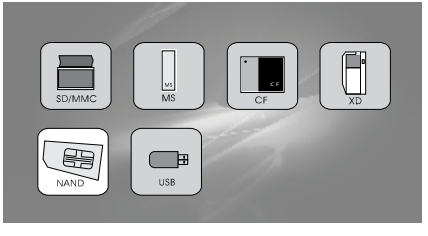

Functions - Music Mode / P&M Mode

Move the dark blue cursor onto the target file in the music format list by using up and down buttons and press enter.

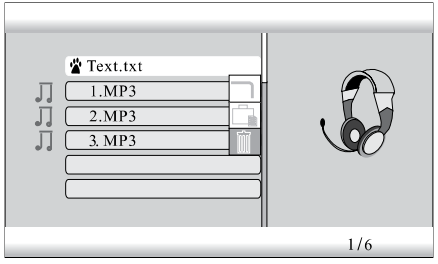

After pressing enter button, the product will circularly play all music stored in the media memory device from the selected file.

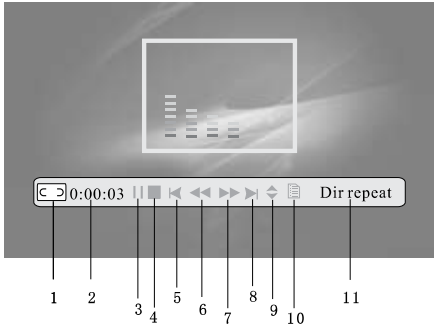

1. Status
2. Playing time
3. Pause
4. Stop
5. Previous
6. Fast rewind
7. Fast forward
8. Next music
9. Music information
10. File information
11. Play mode

Note:- Photos and music must be stored on the same media memory device (e.g. memory cards or internal memory).

P&M Mode

Note:- The P&M button on your remote will play photos and music instantly from the internal memory. To access P&M Mode: On the main menu, move the cursor onto the "P&M" icon (the words below the icon will turn black) by pressing the left and right buttons on the remote control or onboard buttons.

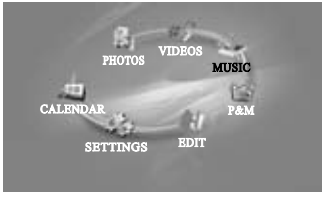

Press Enter button to access Media Memory Device of choice.

Move the dark blue cursor to select media memory device by using up and down buttons and press enter button to access photos, music and file folders.

Functions - P&M Mode/ Edit Mode

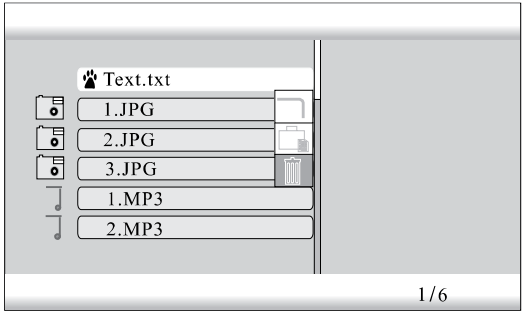

P&M Mode Continued:

Press enter button to access music and photos and the folders index that contain music and photos. Select the desired folder by using up and down buttons and press enter until files in music format are displayed.

P&M OSD Display

1. Music mode control
2. Photos mode control

EDIT Mode:

To access EDIT Mode: On the main menu, move the cursor onto the "EDIT" icon (words below the icon will turn black) by pressing the left and right buttons on the remote control or onboard buttons.

Press "enter" to access Media Memory Device of choice.

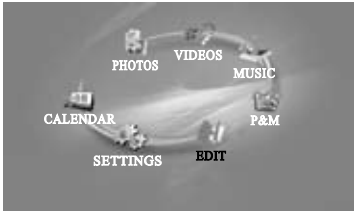

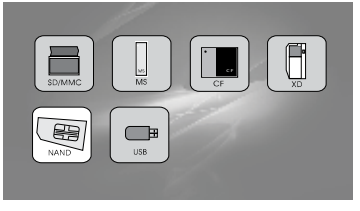

Only available memory devices can be accessed.

Functions - Edit Mode

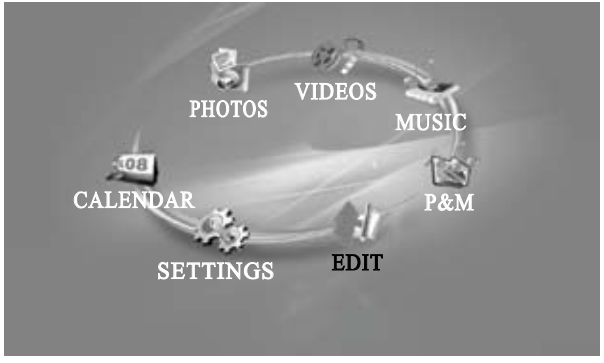

To copy / paste / delete files between storage media:
Select "menu" button on remote. Navigate to "EDIT" then enter button.

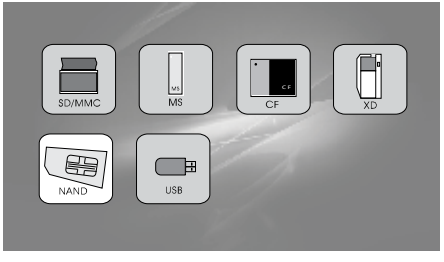

Navigate to the target media memory devices by using direction buttons.
(Select the storage device you wish to copy from / delete, choose "enter" button to select.)

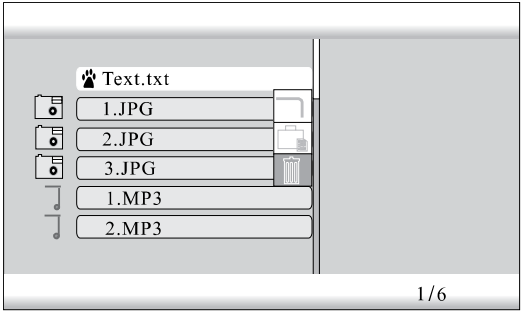

Move the cursor onto the target file by using up and down buttons. Press right button to mark it as a file to be copied. (A symbol will appear next to file name.) You can mark multiple files.

Press the left arrow (<) button to return to memory devices page. Navigate to the memory device you wish to paste to. Press enter to open Media Memory Device of choice.

Functions - Edit Mode

Press the OSD / Calendar button and 3 icons will appear as below. Navigate to “paste” and press “ok”.

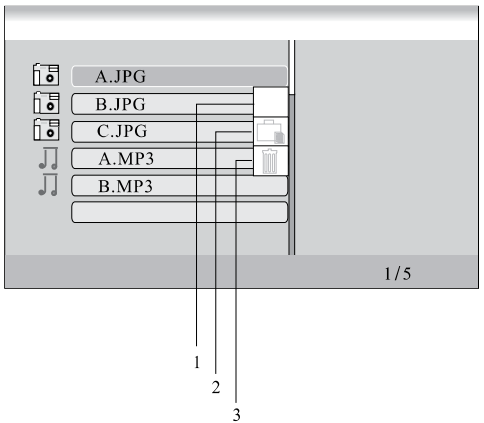

1. Cancel
2. Paste
3. Delete

DELETE FILES

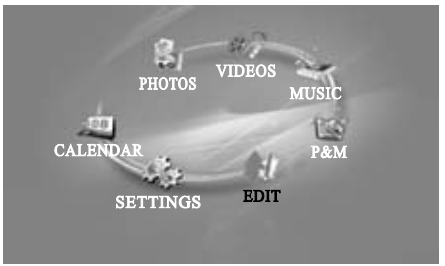

To delete a file choose “EDIT” icon from the main menu.

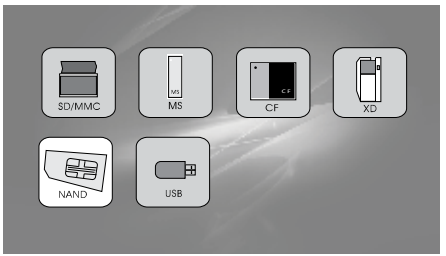

Select the Media Memory Device of choice.

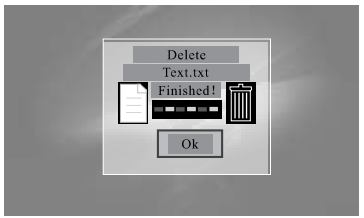

When it shows “Finish” on the screen, press enter button to finish the operation.

Functions - Edit Mode / Caldendar Mode

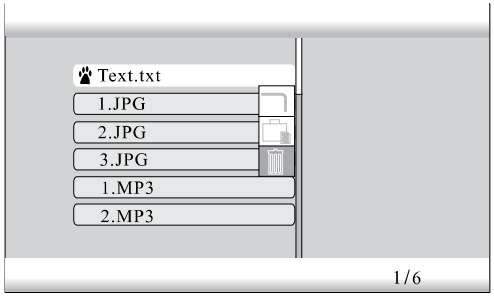

Press enter button to go to the files, and use up and down buttons to choose the file that is to be deleted. Then press right button to mark (icon will appear) as a file to be deleted. Press OSD button on remote control and choose "delete" (bin icon) on the screen to delete the file.

After deleting the files, press enter to confirm.

Calendar Mode: To access CALENDAR Mode, move cursor onto the "Calendar" icon by using left or right button and press "enter".

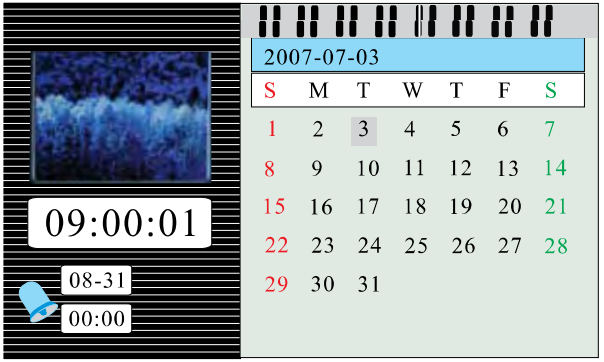

To set time & date press "menu" on remote and navigate to settings. Navigate to Clock set, push enter. Use up and down arrows to adjust time/date. Use left / right arrows to navigate between dates / times etc.

Technical Parameters

Panel	TFT Color Panel
Play mode	MUSIC / PHOTOS / P&M / VIDEOS
External memory cards supported	CF / SD / MS / MMC / XD / USB
Multi-media formats supported	MP3 / WMA / JPEG / JPG / MPEG1 / MPEG 2 / MPEG 4 (Divx - Xvid)
Text formats supported	TXT
Ports	Two USB ports, one performs host function / earphone device
Power supply	DC9V/1.5A
Model	Arcylic front cover

These parameters are for reference only.

Any change shall be subject to products without further notice.

For additional hints & tips – visit us at www.digiframe.com.au
For Repairs & Service please contact CUSTOMER SERVICE on 1300 559 881
or email support@digiframe.com.au

DigiFrame
digital photo frame